

# SAFARI™ 5

by OPTEX

FRONT FACING  
HD SELFIE LCD  
SCREEN



+ 12  
ACCESSORIES





## **WARNING**

- 1.** This is a sensitive piece of electronic equipment, please take care of your camera and do not let it fall.
- 2.** Avoid having your camera near anything with a strong magnetic field or radio signal, this can effect sound and image quality or prevent correct functioning of the product altogether.
- 3.** Please do not expose the camera to direct sunlight or high temperature.
- 4.** Please store your camera in a dry and protective area.
- 5.** Lithium battery inside! Do not try to open the product and do not expose to heat, water, moisture or direct sunlight.
- 6.** Please take care when charging the batteries and keep away from children.

## APPEARANCE AND BUTTONS

- 1 Front HD LCD Screen (1.3")
- 2 Lens
- 3 Rear HD LCD Screen (2")
- 4 Charging Indicator
- 5 Power/Mode Button
- 6 Microphone
- 7 Busy Indicator
- 8 Shutter/OK Button
- 9 Battery Door
- 10 Speaker
- 11 Battery
- 12 Micro SD Card Slot
- 13 Micro USB Port
- 14 WiFi Down Button



# OPERATING INSTRUCTIONS

## 1. Charge the battery

Connect the camera to a computer or USB wall charger for charging. The Charging Indicator light will flash red to indicate charging in progress. The light will stop flashing when charging is complete. Ensure that the battery is fully charged before use.


## 2. Using the Micro SD card


Push the Micro SD card into the slot until it clicks into place. The label will face the front of the camera. To remove the Micro SD card, press the tail of the storage card inward softly and it will eject from the camera.




**Note:** Please use Class 10 Micro SD cards up to 64GB only. Please turn off the camera prior to plugging-in or pulling-out the memory card.

## 3. Power On/Off

**Power On:** Press and hold the Power/Mode button  for 3 seconds, the screen will turn on and the camera will be ready for use.

**Power Off:** Hold the Power/Mode button  for 3 seconds, when the camera is in the idle state, to turn it off.

## 4. Cycling between modes

The camera has 5 modes: video recording, photography, slow motion, playback and settings. After the power is on, press the Power/Mode button  to cycle between them.



**Video  
Recording  
Mode**



**Photography  
Mode**




**Slow  
Motion  
Mode**

## 5. Busy Indicator light

The Busy Indicator light will flicker blue when the camera is recording videos, shooting photos and etc. When not busy the indicator light will be solid blue with no flicker.

# OPERATING INSTRUCTIONS

## 6. Front LCD Screen

Press the WiFi Down button  while in video recording, photography or slow motion mode to access the front facing LCD screen.




## 7. Settings Menu Operation

The available menu items will change depending on the shooting mode as shown in the following images below.


### a) How to access the Menu


To access the Settings Menu press the Power/Mode button  four times once the camera is turned on. Press the Shutter/OK button  to enter the menu screen.

### b) How to toggle through the Menu



To toggle through the Menu Modes use the Power/Mode button . Once the desired mode is highlighted press the Shutter/OK button  to select the secondary menu of each mode and the WiFi Down button  to scroll.

### c) How to change languages

 
In Settings Mode menu, select "Languages" and press the Shutter/OK button  to enter the sub-menu then move the cursor,

using the WiFi Down button  to select the preferred language.


### d) How to exit the Menu

To exit the Settings Menu toggle to the **X** icon using the Power/Mode button  and press the Shutter/OK button  on the menu item that says "Press Ok To Exit."


# OPERATING INSTRUCTIONS

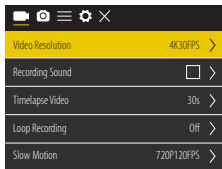


**Menu For Video  
Recording Mode**

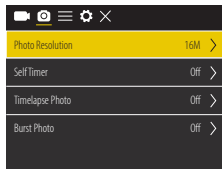 

**Menu For  
Photography Mode**

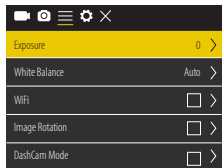 

**Menu For WiFi,  
DashCam & Other**

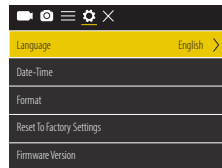 





**Menu For  
Camera Settings**



## OPERATING INSTRUCTIONS



### 8. Formatting the Micro SD card

When using the Micro SD card for the first time the message, "Please format SD card!" may appear.


If the message appears please follow these instructions:

 
- a) With the camera turned off insert the Micro SD card (*up to 64GB capacity*).
- b) With the screen facing you. Hold the Power/Mode button  for 3 seconds to power on the camera.
- c) Short press the Power/Mode button  to cycle through the different modes until you reach the Settings mode. The cogged wheel icon will display on the screen. Press the Shutter/OK button  to enter the Settings menu.
- d) Once in the Settings menu press Power/Mode button  to scroll to the cogged wheel icon. The yellow line under each icon will move under the item that is selected.

e) Press the WiFi Down button  to select the, "Format" option. Then press the Shutter/OK button .

f) Press WiFi Down button  to select the "Confirmation" option. Then press the Shutter/OK button .

g) Format has been completed.

h) To exit the Setting menu press Power/Mode button  once to reach the X icon, then press the Shutter/OK button .

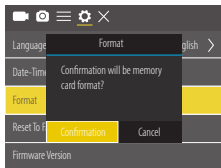



**Menu For Memory  
Card Formatting**




# OPERATING INSTRUCTIONS

## 9. Video Recording Mode

After the power is on, the camera will start off in Video Recording Mode. Press the Shutter/OK button  to start recording; press the Shutter/OK button  again to stop recording.

**Note:** If the memory card is full or the battery power is low, the camera will automatically stop recording.

### Taking a photo while recording:

Hold down the Shutter/OK button  for 3 seconds during recording to take a photo.

- 1 Video icon indicating that the camera is in Video Recording Mode.
- 2 Text indicating the size of video:  
4K (30fps) / FHD 1080p (60fps) / FHD 1080p (30fps) / HD 720p (120fps).
- 3 Text indicating how much space is left on the inserted memory card.
- 4 SD icon in solid white indicates that the Micro SD card is inserted in the camera.
- 5 WiFi icon is faded indicating WiFi is not connected.

- 6 Battery icon, indicating current battery power level.
- 7 Microphone icon indicating that the microphone is active.
- 8 Text indicating the current date.
- 9 Text indicating the recording time of a video.

 


# OPERATING INSTRUCTIONS



## 10. Photography Mode

After power is on, press the Power/Mode button  once to enter Photography Mode, press Shutter/OK button  to take a photo:

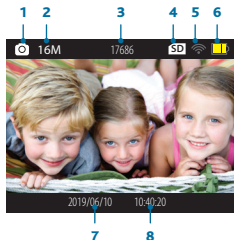- 1 Photo icon indicating that the camera is in Photography Mode.
- 2 Text indicating the photo resolution: 2M / 5M / 8M / 12M / 16M
- 3 Text indicating the amount of photos remaining on the SD card.
- 4 SD icon in solid white indicates that the Micro SD card is inserted in the camera.
- 5 WiFi icon in solid white indicates that WiFi mode is turned on. Icon shows up faded when WiFi mode is turned off.
- 6 Battery icon indicating current battery power level.
- 7 Text indicating the current date.
- 8 Text indicating the current time.




## 11. Slow Motion Mode

 After power is on, press the Power/Mode button  twice to enter Slow Motion Mode, press Shutter/OK button  to start recording:

- 1 Slow icon indicating that the camera is in Slow Motion Mode.
- 2 Text indicating the size of video: FHD 1080p (60fps) / HD 720p (120fps).
- 3 Text indicating how much space is left on the inserted memory card.



# OPERATING INSTRUCTIONS

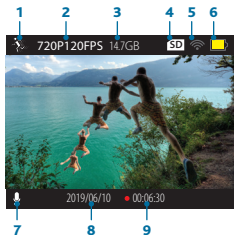
- 4 SD icon in solid white indicates that the Micro SD card is inserted in the camera.
- 5 WiFi icon in solid white indicates that WiFi mode is turned on. Icon shows up faded when WiFi mode is turned off.
- 6 Battery icon indicating current battery power level.
- 7 Microphone icon indicating that the microphone is active.
- 8 Text indicating the current date.
- 9 Text indicating the recording time of a video.




**Note:** The quality of the video can be adjusted in the Settings Menu under the video icon.

## 12. Playback Mode

After the power is on, press the Power/Mode button  three times to enter Playback Mode, press Shutter/OK button  to view photos and play videos.

Use the WiFi Down button  to toggle through photos and videos.


## 13. Deleting media from the camera

While in Playback Mode hold the Shutter/OK button  for 3-5 seconds to delete the selected media. To delete all the media on the SD card, select format from the Settings Menu and then confirm you would like to delete everything.

# OPERATING INSTRUCTIONS



## 14. Transferring media to a computer and charging the camera battery

Connect the camera to a computer using the Micro USB cable. The camera will be powered on and three options will appear on the screen: USB Mode, PC Camera and Charging Mode.

**USB Mode:** is used to transfer media from the camera to a computer. To select the USB Mode press the Shutter/OK button .

 
 
 
**PC Camera:** is used to access the web camera on the computer. To select PC Camera press the WiFi Down button  once and then press the Shutter/OK button .

**Note:** This feature is not compatible with all computers.

**Charging Mode:** is used to charge the camera. To select the Charging Mode press the WiFi Down button  twice and then press the Shutter/OK button .



The Charging Indicator light will flash red to indicate charging in progress. The light will stop flashing when charging is complete. Ensure that the battery is fully charged before use.


**Note:** Charging can also be achieved by plugging the camera into a USB wall charger. No mode selection is needed to charge this way.







# OPERATING INSTRUCTIONS

## 15. Advanced Settings Menu Operation

**Timelapse Video:** In Video Recording Mode menu, select "Timelapse Video" and press the Shutter/OK button  to enter the sub-menu then move the cursor, using the WiFi Down button  to select timelapse intervals: Off / 0.5s / 1s / 2s / 5s / 10s / 30s / 60s, and press the Shutter/OK button  to confirm.

When the Shutter/OK button  is pressed in Video Recording Mode while Timelapse Video is active the device will record video frames at the set time intervals creating a timelapse.

**Loop Recording:** In Video Recording Mode menu, select "Loop Recording" and press the Shutter/OK button  to enter the sub-menu then move the cursor, using the WiFi Down button  to select the loop time: Off / 2 min / 3 min / 5 min, and press the Shutter/OK button  to confirm.

When the Shutter/OK button  is pressed in Video Recording Mode while Loop Recording is active the device will continuously video record; overwriting the beginning of your video to allow for new footage to be captured, which can help to conserve space on your Micro SD card.



**Timelapse Video Icon**








**Loop Recording Icon**




**Note:** Specified icons will appear when in the correct settings for each advanced feature.


# OPERATING INSTRUCTIONS

## 15. Advanced Settings Menu Operation (Continued...)

**Timelapse Photo:** In Photography Mode menu, select "Timelapse Photo" and press the Shutter/OK button  to enter the sub-menu then move the cursor, using the WiFi Down button  to select timelapse intervals: Off / 3s / 10s / 15s / 20s / 30s, and press the Shutter/OK button  to confirm.

When the Shutter/OK button  is pressed in Photography Mode while Timelapse Photo is active the device will take continuous photos at the set time intervals. Press the Shutter/OK button  to stop the sequence.

**Burst Photo:** In the Photography Mode menu, select "Burst Photo" and press the Shutter/OK button  to enter the sub-menu, then move the cursor, using the WiFi Down button  to select burst photo intervals Off / 3 Photos / 5 Photos / 10 Photos Continuous, and then press the Shutter/OK button  to confirm.

When the Shutter/OK button  is pressed in Photography Mode while Photo Burst is on, a number of photos will be taken quickly in a row to capture moving content.



**Timelapse Photo Icon**



**Burst Photo Icon**


**Note:** Specified icons will appear when in the correct settings for each advanced feature.

# APP (FOR ANDROID AND IOS)

## I. How to obtain the APP installation program

1. On Android and Apple (iOS) devices search "Safari Connect 5D" in the Apple APP Store or Google Play Store (depending on your mobile device) proceed with installation of the APP on your device.

## II. How to connect the camera to the mobile device

1. Please install the "Safari Connect 5D" application program on your Android or Apple (iOS) device.
2. Insert a Micro SD card into the camera and then power it on.
3. Turn the WiFi on by holding down the WiFi Down button  for 2 second until the WiFi logo appears on screen. The top WiFi indicator will start to flash orange once WiFi is activated. Then the WiFi information screen will appear providing a name and password.

To disable the WiFi press the WiFi Down button  for 2 seconds.

4. Enable the WiFi function of the mobile phone or tablet and wait for the "Safari5D" network to appear; select the connection and enter the password that appears on the screen of the camera.
5. Tap and enable the "Safari Connect 5D" APP on the mobile phone or tablet.
6. Select the camera name as it appears on screen.
7. You can directly view the preview picture transmitted by the camera, and then conduct relevant operations.
8. Recorded photo and video files can be viewed and uploaded from the camera to the mobile device through the application.

**Note:** *Previews appear in lower resolution but high resolution files will be available once uploaded to the mobile device.*

9. Content can then be easily shared with all of your friends through messaging or social media platforms.



## APP (FOR ANDROID AND IOS)



Search: Safari Connect 5D



**ATTENTION**

This APP requires Android 4.1 or more and iOS 7 or more.



## INCLUDED ACCESSORIES



**Waterproof  
Housing**



**Handlebar  
Mount**



**Frame  
Cage**



**Battery**



**Angle  
Adapter**



**Tripod  
Adapter**



**Quick Release  
Mount**



**Helmet  
Pedestal**



**Adhesive**



**Micro USB  
Cable**



**Microfibre  
Cloth**



**Mount Straps**



**Instruction  
Manual**

## SPECIFICATIONS

 170° Super-wide angle lens

### VIDEO

4K 30fps (interpolated) • 16:9

2.7K 30fps • 16:9

1080p 60fps & 30fps • 16:9

720p 120fps • 16:9

Format: MP4 - H.264

Microphone and Speaker: built-in

### SLOW MOTION

720p 120fps

### PHOTO

Sony CMOS sensor: 16MP

Burst and timed photo capture

### TIME PHOTO

3s/5s/10s/20s

### TIME LAPSE

0.5s/1s/2s/5s/10s/30s/60s

### WIFI

Connected APP for Android and iOS

### MEDIA

Micro SD cards up to 64GB,  
minimum Class 10 (not included)

### POWER

1050mah, Lithium battery included,  
record video for 90 minutes in 4K

### 30m (100ft)

 2 Inch on-board HD LCD screen and  
1.3 Inch front facing HD selfie LCD screen

**Note:** Specifications could be subject to modification due to upgrading or updating.  
Please regard the actual product as the standard form.

## CUSTOMER SERVICE

For more information or service contact Customer Service Department

**Email:** [support@safaricam.ca](mailto:support@safaricam.ca) or **Phone:** 905-513-7733



**SAFARI<sup>TM</sup> 5**  
by OPTEx

[safaricam.ca](http://safaricam.ca)

Distributed in Canada by Gentec International • [gentec-intl.com](http://gentec-intl.com)