



# DUAL SCREEN ACTION CAMERA KIT

User Manual




## **WARNING**

- 1.** This is a sensitive piece of electronic equipment, please take care of your camera and do not let it fall.
- 2.** Avoid having your camera near anything with a strong magnetic field or radio signal, this can effect sound and image quality or prevent correct functioning of the product altogether.
- 3.** Please do not expose the camera to direct sunlight or high temperature.
- 4.** Please store your camera in a dry and protective area.
- 5.** Lithium battery inside! Do not try to open the product and do not expose to heat, water, moisture or direct sunlight.
- 6.** Please take care when charging the batteries and keep away from children.

## APPEARANCE AND BUTTONS

- 1 Front HD LCD Screen (1.3")
- 2 Lens
- 3 Rear HD LCD Screen (2")
- 4 Busy Indicator
- 5 Charging Indicator
- 6 Power Indicator
- 7 Power/Mode Button
- 8 Shutter/OK Button
- 9 Battery Door
- 10 Battery
- 11 Speaker
- 12 Up / Down Buttons
- 13 USB-C Port
- 14 Micro SD Card Slot
- 15 Micro HDMI Port

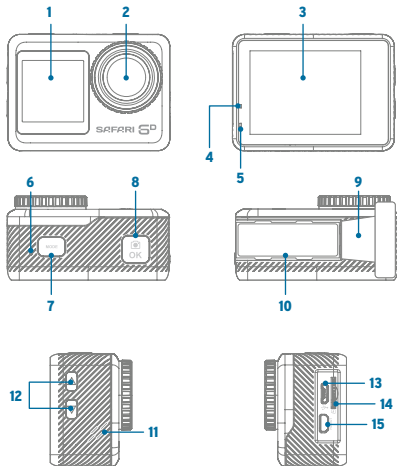


## OPERATING INSTRUCTIONS

### 1. Charge the Battery


Connect the camera to a computer or USB wall charger for charging. The red Charging Indicator light will turn on to indicate charging in progress. The light will turn off when charging is complete. Ensure that the battery is fully charged before use.

### 2. Using the Micro SD card

Push a Micro SD card into the slot until it clicks into place. The label will face the back of the camera. To remove the Micro SD card, press the tail of the card inward softly and it will eject from the camera.

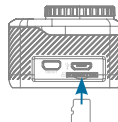

### 3. Power On/Off

**Power On:** Press and hold the Power/Mode button  for 3 seconds, the screen will turn on and the camera will be ready for use.

**Power Off:** Hold the Power/Mode button  for 3 seconds, the camera will turn off.

### 4. Switching Between Modes

The camera has 3 modes: video recording, photography, and menu. After the power is on, press the Power/Mode button  to cycle between them.


#### Video Recording Mode



#### Photography Mode



#### Menu Mode

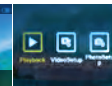


### 5. Busy Indicator Light

The Busy Indicator will be lit blue when the camera is recording videos, shooting photos, etc.

### 6. Front LCD Screen

Press and hold the WiFi/Down button  while in video recording, photography mode to switch between front LCD screen and rear LCD screen.

# VIDEO RECORDING MODE

When first turned on, the camera will start off in Video Recording Mode. Press the Shutter/OK button  to start recording; press the Shutter/OK button  again to stop recording.

**Note:** If the memory card is full or the battery power is low, the camera will automatically stop recording.






- 1 Current video recording mode
- 2 Current video recording mode and resolution
- 3 Current battery level
- 4 Microphone icon indicating that the microphone is active
- 5 Available time for recording on the memory card
- 6 Current recording time of video



## 7. Switching between different video recording modes

There are 5 video recording modes: Normal, Loop Recording, Video Time-lapse, Slow Motion and Fast Motion. During any video recording mode, press and hold the Shutter/OK button  to enter video recording mode selection menu:




Press the UP  or DOWN  button to select desired video recording mode then press Shutter/OK button  to confirm selection. The relevant video mode icon will then be displayed in the top left corner of the screen.




# PHOTOGRAPHY MODE






After the power is on, the camera will start off in Video Recording Mode. Press the Power/Mode button  once to enter Photography mode; press the Shutter/OK button  to take a photo.

## 8. Switching between different photography modes

There are 5 photography modes: Normal, Burst, Photo Timelapse, Self-Timer and Long Exposure. During any photography mode, press and hold the Shutter/OK button  to enter the photography mode selection menu:





 




Press the UP  or DOWN  button to select desired photography mode then press the Shutter/OK button  to confirm selection. The relevant photography mode icon will then be displayed in the top left corner of the screen.

Normal	When this mode is selected, press the Shutter/OK button  to start and stop recording.
Loop Record	<ul style="list-style-type: none"><li>•This allows continuous recording video into a 1, 3, or 5 minute video clip as chosen by the user. (See Section 10. Video Setup)</li><li>•When this mode is selected, press the Shutter/OK button  to start and stop loop recording.</li></ul>
V-Timelapse	<ul style="list-style-type: none"><li>•The length of timelapse interval can be set to: 1, 3, 5, 10, 30 seconds, or 1 minute.</li><li>•The timelapse recording duration can be set to either 5, 10, 15, 20, 30, 60 minutes, or set to unlimited (recording until the memory card is full or stopped). (See Section 10. Video Setup)</li><li>•When this mode is selected, press the Shutter/OK button  to start and stop timelapse recording.</li></ul>
Slow Motion	<ul style="list-style-type: none"><li>•This allows users to record slow-motion video.</li><li>•When this mode is selected, press the Shutter/OK button  to start and stop slow motion recording</li></ul>
Fast Motion	This allows users to record fast-motion video in different speed (x2, x4, x6, x10, x15) (See Section 10. Video Setup)
WiFi	Select this icon and press the Shutter/OK button  to turn the Wi-Fi function on.


 


## PHOTOGRAPHY MODE

 


- 1 Current photography mode
- 2 Current photography mode and resolution
- 3 Current battery level
- 4 Number of photos stored and remaining on the memory card




<b>Single</b>	<ul style="list-style-type: none"> <li>In Single mode, Press the Shutter/OK button  to take a single photo</li> <li>Photo resolution can be set to: 2, 5, 8, 10, 14, 16, or 20 megapixels. (See Section 11. Photo Setup)</li> </ul>
<b>Burst</b>	<ul style="list-style-type: none"> <li>In Burst mode, press the Shutter/OK button  to take a continuous burst of photos</li> <li>The number of photos in each burst can be set to: 3, 7, 15, or 30 images. (See Section 11. Photo Setup)</li> <li>A blue busy indicator light will also be flashing when taking burst photos</li> </ul> <p><b>Note:</b> The camera needs a longer period of time to store photos when using this mode and it cannot take other photos until they are stored.</p>
<b>P-Timelapse</b>	<ul style="list-style-type: none"> <li>In P-Timelapse mode, press the Shutter/OK button  to begin the timelapse photography. The camera will begin taking photos at the set interval. Press the Shutter/OK button  again to stop the timelapse photographing.</li> <li>The time interval can be set to either 3, 5, 10, 30, or 60 seconds. The duration of the timelapse can be set to: Unlimited, 5, 10, 15, 20, 30, 60min. (See Section 11. Photo Setup)</li> </ul>
<b>Self-Time</b>	<ul style="list-style-type: none"> <li>In Self-Time mode, press the Shutter/OK button  to begin count down, and a photo will be taken when the count down is finished.</li> <li>The timer can be set to either 2, 5, or 10 seconds (See Section 11. Photo Setup)</li> </ul>
<b>LongExp</b>	<ul style="list-style-type: none"> <li>In LongExp mode, press the Shutter/OK button  to take a photo with a long exposure time.</li> <li>The length of exposure time can be set to either 1, 2, 5, 8, 30, or 60. (See Section 11. Photo Setup)</li> </ul>
<b>WiFi</b>	Select this icon and press Shutter/OK button  to turn the Wi-Fi function on.

## MENU MODE

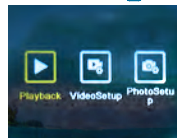After the power is on, press the Power/Mode button  two times to enter Menu mode, there are three options (Playback, Video Setup, Photo Setup). Press the UP  or DOWN  button to switch between the three options, then press the Shutter/OK button  to confirm.


 





 






 








 





### 9. Playback Menu

This allows you to view the photos and videos on the camera. The playback menu starts off at the Video Gallery, press the UP  or DOWN  button to select between Video Gallery, Photo Gallery, Delete or Exit, then press the Shutter/OK button  to confirm.



 
Playback Home Screen

<b>Video Gallery</b>	<ul style="list-style-type: none"> <li>Press the UP  or DOWN  button and the Shutter/OK button  on the Playback Home Screen to select Video Gallery. Then, press the Power/Mode button  to enter the video gallery. All videos recorded on the camera can be viewed here.</li> <li>Use the UP  or DOWN  button to browse through videos, then press the Shutter/OK button  to play/pause the selected video, press Power/Mode button  to return to Playback Home Screen.</li> </ul>
<b>Photo Gallery</b>	<ul style="list-style-type: none"> <li>Press the UP  or DOWN  button on the Playback Home Screen to select the Photo Gallery. Then, press the Power/Mode button  to enter the photo gallery. All photos taken on the camera can be viewed here.</li> <li>Use the UP  or DOWN  button to browse through photos, then press the Shutter/OK button  to view the selected photo in full-screen, press the Mode button  to return to the Playback Home Screen.</li> </ul>
<b>Delete</b>	<p>Use to delete photos or videos:</p> <ol style="list-style-type: none"> <li>In either Video Gallery or Photo Gallery, press the UP  or DOWN  button to highlight the Delete icon.</li> <li>Press the Power/Mode button  to enter the chosen gallery you wish to delete photos or videos from.</li> <li>Press the UP  or DOWN  button to browse through the photos and videos, then press the Shutter/OK button  to select the ones you wish to delete.</li> <li>Press the Power/Mode button , (Note: There is an option to delete all photos or videos) followed by the Shutter/OK button  to confirm the deletion.</li> <li>Press the Power/Mode button  to return to the Playback Home Screen.</li> </ol>
<b>Exit</b>	On the Playback Home Screen, press the UP  or DOWN  button to select the Exit icon, then press the Shutter/OK button  to exit the playback menu.

## ADVANCED VIDEO RECORDING/ PHOTOGRAPHY SETTING

### 10. Video Setup Menu

There are various advanced settings for different Video Recording modes. To change the settings, first, select the desired Video Recording mode (Section 7), then go to Video Setup menu in Menu mode.

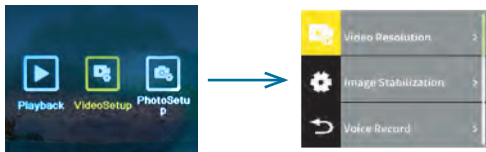

In the Video Setup menu, press the UP or DOWN button and the Shutter/OK button to select the setting desired. In each setting, press the UP or DOWN button again to select further setting options, press the Shutter/OK button to confirm.

Some settings may only be available for specific video recording modes, please see the following table.

	Normal Mode	Loop Record Mode	V-Timelapse Mode	Slow Motion Mode	Fast Motion Mode
<i>Video Resolution</i>	4K (@ 60 / 30 fps) 2.7K (@ 60 / 30 fps) 1080p (@ 120 / 60 / 30 fps) 720p (@ 240 / 120 / 60 fps)	4K (@ 60 / 30 fps) 2.7K (@ 60 / 30 fps) 1080p (@ 120 / 60 / 30 fps) 720p (@ 240 / 120 / 60 fps)	4K (@ 60 / 30 fps) 2.7K (@ 60 / 30 fps) 1080p (@ 120 / 60 / 30 fps) 720p (@ 240 / 120 / 60 fps)	4K (@ 60 fps) 2.7K (@ 60 fps) 1080p (@ 60 fps) 720p (@ 120 / 60 fps)	4K (@ 60 / 30 fps) 2.7K (@ 60 / 30 fps) 1080p (@ 120 / 60 / 30 fps) 720p (@ 120 / 60 fps)
<i>Image Stabilization (Only available when resolution set at 60fps or lower)</i>	On / Off	On / Off	N/A	N/A	On / Off
<i>Loop Recording</i>	N/A	1 / 3 / 5 min	N/A	N/A	N/A
<i>Timelapse &amp; Timelapse Duration</i>	N/A	N/A	Timelapse (1 / 3 / 5 / 10 / 30s / 1min) Timelapse Duration (Unlimited / 5 / 10 / 15 / 20 / 30 / 60min)	N/A	N/A
<i>Fast Motion Movie</i>	N/A	N/A	N/A	N/A	2x / 4x / 6x / 10x / 15x
<i>Voice Record</i>	On / Off	On / Off	N/A	N/A	N/A
<i>Wind Noise Reduction</i>	On / Off	On / Off	N/A	N/A	N/A
<i>Auto Low Light (Only available when resolution set at 60fps or higher)</i>	On / Off	On / Off	On / Off	On / Off	On / Off
<i>EV</i>	-2.0 / -1.0 / 0.0 / +1.0 / +2.0	-2.0 / -1.0 / 0.0 / +1.0 / +2.0	-2.0 / -1.0 / 0.0 / +1.0 / +2.0	-2.0 / -1.0 / 0.0 / +1.0 / +2.0	-2.0 / -1.0 / 0.0 / +1.0 / +2.0
<i>Metering</i>	Center / Multi	Center / Multi	Center / Multi	Center / Multi	Center / Multi
<i>Date Stamp</i>	Off / Date / Date & Time	Off / Date / Date & Time	Off / Date / Date & Time	Off / Date / Date & Time	Off / Date / Date & Time

## ADVANCED VIDEO RECORDING/ PHOTOGRAPHY SETTING

### 11. Photo Setup Menu

There are various advanced settings for different Photography modes. To change the settings, first, select the desired Photography mode (Section 8), then go to the Photo Setup menu in the Menu mode.






In the Photo Setup menu, press the UP or DOWN button and the Shutter/OK button to select the desired setting. In each setting, press the UP or DOWN button again to select the setting option, press the Shutter/OK button to confirm.

 
Some settings may only available for a specific photography mode, please see the following table.







	Normal Mode	Burst Mode	P-Timelapse Mode	Self-Time Mode	LongExp Mode
Photo Resolution	20 / 16 / 14 / 10 / 8 / 5 / 2 MP	20 / 16 / 14 / 10 / 8 / 5 / 2 MP	20 / 16 / 14 / 10 / 8 / 5 / 2 MP	20 / 16 / 14 / 10 / 8 / 5 / 2 MP	20 / 16 / 14 / 10 / 8 / 5 / 2 MP
Photo Burst	N/A	3 / 7 / 15 / 30 shots	N/A	N/A	N/A
Timelapse & Timelapse Duration	N/A	N/A	Timelapse (3 / 5 / 10 / 30s / 1min)	N/A	N/A
			Timelapse Duration (Unlimited / 5 / 10 / 15 / 20 / 30 / 60min)		
Delay Time	N/A	N/A	N/A	Delay 2 / 5 / 10 s	N/A
Long Exposure	N/A	N/A	N/A	N/A	1 / 2 / 5 / 8 / 30 / 60 s
Image Quality	High / Middle / Low	High / Middle / Low	High / Middle / Low	High / Middle / Low	High / Middle / Low
ISO	Auto / 100 / 200 / 400 / 800 / 1600 / 3200	Auto / 100 / 200 / 400 / 800 / 1600 / 3200	Auto / 100 / 200 / 400 / 800 / 1600 / 3200	Auto / 100 / 200 / 400 / 800 / 1600 / 3200	Auto / 100 / 200 / 400 / 800 / 1600 / 3200
EV	-2.0 / -1.0 / 0.0 / +1.0 / +2.0	-2.0 / -1.0 / 0.0 / +1.0 / +2.0	-2.0 / -1.0 / 0.0 / +1.0 / +2.0	-2.0 / -1.0 / 0.0 / +1.0 / +2.0	-2.0 / -1.0 / 0.0 / +1.0 / +2.0
Metering	Center / Multi	Center / Multi	Center / Multi	Center / Multi	Center / Multi
Date Stamp	Off / Date / Date & Time	Off / Date / Date & Time	Off / Date / Date & Time	Off / Date / Date & Time	Off / Date / Date & Time
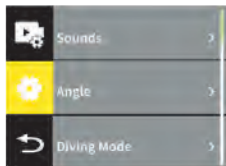
## ADVANCED VIDEO RECORDING/ PHOTOGRAPHY SETTING

### 12. Camera General Setting Menu

In the Video Setup Menu or Photo Setup Menu, press the UP  or DOWN  button and the Shutter/OK button  to enter the Camera's General Settings Menu



In the General Settings menu, press the UP  or DOWN  button to browse through the settings and press Shutter/OK button  to select the desired setting. In each setting, press the UP  or DOWN  button again to select the desired setting option, then press the Shutter/OK button  to confirm.

Sound	(Shutter / Boot-up / Beep / Volume) - On / Off
Angle	Wide / Medium / Narrow
Diving Mode	On / Off
Effect	Normal / BW / Natural / Negative / Warm / Brightness Contrast
Distortion Calibration	On / Off
Driving Mode	On / Off
Upside Down	On / Off
Screen Saver	Off / 1 min / 3 mins / 5 mins
Auto Power Off	Off / 1 min / 3 mins / 5 mins
Power Frequency	50Hz / 60Hz / Off
White Balance	Auto / Daylight / Shade / Tungsten Light / Fluorescent
Date & Time	Year - Month - Date
Language	11 languages
Format Card	Yes / No
System	Factory Reset / System Info / Card Info




### 13. Transferring media to a computer and charging the camera battery

Connect the camera to a computer using the provided USB cable. The camera will be powered on and four options will appear on the screen: MSDC, PC Camera, Working, Charging

**MSDC:** Connects camera to the computer as an external drive to access or download videos/photos stored in the memory card inside the camera. When the camera is connected to the computer by USB cable, press the UP  or DOWN  button and Shutter/OK button  to select MSDC. Search external drive from the computer directory to access the data stored in the camera. Unplug USB cable to exit.

**PC Camera:** is to use the camera as a web cam on a computer. When camera is connected to a computer by USB cable Press the UP  or DOWN  button and the Shutter/OK button  to select PCCAM, PC Camera function will be activated shortly. Unplug USB cable to exit.

**Note:** This feature is not compatible with all computers.

**Working Mode:** is used to operate and charge the camera when the battery is not inserted in the camera or when the camera is in low power mode. Press the UP  or DOWN  button and the Shutter/OK button  to select Working when the camera is connected to a computer by USB cable. Unplug USB cable to exit.

**Charging Mode:** is used to charge the camera by connecting to computer. Press the UP  or DOWN  button and Shutter/OK button  to select Charging when it is connected to a computer by USB cable, the camera will turn off and start to charge. Unplug USB cable to exit.

**Note:** Charging can also be achieved by plugging the camera into a USB wall charger. No mode selection is needed to charge this way.





## APP (FOR ANDROID AND IOS)


### How to obtain the APP installation program

On Android and Apple (iOS) devices search “Safari Connect 6D” in the Apple APP Store or Google Play Store (depending on your mobile device) proceed with installation of the APP on your device.

System Requirement: IOS 8.0 or above; Android 8.1 or above

### How to connect the camera to the mobile device

1. Install the “Safari Connect 6D” APP on your Android or Apple (iOS) device.
2. Insert a Micro SD card into the camera and then power it on.
3. Turn the Wifi on by pressing the Wifi/Down  button . Then the WiFi information screen will appear providing a SSID name and password. To disable the Wifi press the Wifi/Down  button again.

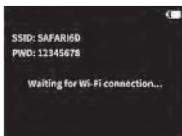

4. Enable the Wifi function of the mobile phone or tablet and wait for the “Safari 6D” network to appear; select the connection and enter the password that appears on the screen of the camera.

5. Open “Safari Connect 6D” APP on the mobile phone or tablet.

6. Select the camera name as it appears on screen.

7. You can directly view the preview picture transmitted by the camera, and then conduct relevant operations.

8. Recorded photo and video files can be viewed and uploaded from the camera to the mobile device through the application.

**Note:** Previews appear in lower resolution but high resolution files will be available once uploaded to the mobile device.

9. Content can then be easily shared with all of your friends through messaging or social media platforms.



## APP (FOR ANDROID AND IOS)



Search: Safari Connect 6D



## INCLUDED ACCESSORIES



**Waterproof Case**



**Handlebar Mount**



**Frame Cage**



**Battery**



**Quick Release Mount**



**Angle Adapter**



**Tripod Adapter**



**Helmet Pedestal**



**USB-C Cable**



**Mount Straps**



**Adhesive**



**Microfibre Cloth**



**Instruction Manual**

## SPECIFICATIONS

 170° Super-wide angle lens

### VIDEO

4K 60FPS, 30FPS • 16:9  
2.7K 60FPS, 30FPS • 16:9  
1080P 120FPS, 60FPS, 30FPS • 16:9  
720P 240FPS, 120FPS, 60FPS • 16:9  
FORMAT: MOV (H.264)  
MICROPHONE AND SPEAKER: BUILT-IN

### SLOW/FAST MOTION

4K/2.7K/1080p - 60fps  
720p - 120fps/60fps

### LOOP RECORDING

1m/3m/5m

### PHOTO

Sony IMX CMOS sensor: 20MP  
Burst, timed, long exposure photo capture

### TIME LAPSE

3s/5s/10s/30s/60s

### WIFI

Connected APP for Android and iOS

### MEDIA

Micro SD cards up to 256GB,  
minimum Class 10 (not included)

### POWER

960mAh Lithium battery included,  
record video for 90 minutes in 4K

### 30m (100ft)

 2 Inch main HD LCD screen  
and front facing HD LCD selfie screen

 USB-C, Micro HDMI output  
(cables not included)

**Note:** Specifications could be subject to modification due to upgrading or updating.  
Please regard the actual product as the standard form.

## CUSTOMER SERVICE

For more information or service contact Customer Service Department

**Email:** [support@safaricam.ca](mailto:support@safaricam.ca) or **Phone:** 905-513-7733



[safaricam.ca](http://safaricam.ca)

Distributed in Canada by Gentec International • [gentec-intl.com](http://gentec-intl.com)